

# EdenPURE®

Bringing Home Better Living



## 360 Air Fan

Model: A5728

### IMPORTANT SAVE THESE INSTRUCTIONS

---

To ensure you get the best results from your Fan, please read this manual first and keep it for future reference. For additional information, please contact your place of purchase or call 1-800-225-6595

---

Thank you for choosing EdenPURE®

# IMPORTANT INSTRUCTIONS

## WARNING

IMPROPER USE OF THIS FAN COULD RESULT IN RISK OF FIRE, ELECTRIC SHOCK,  
AND INJURY TO PERSONS

---

## WARNING

ANY REQUIRED SERVICE OTHER THAN FILTER ROUTINE CLEANING SHOULD ONLY BE  
PERFORMED BY AN AUTHORIZED SERVICE REPRESENTATIVE AND ANY  
OTHER REPAIRS ATTEMPTED BY ANYONE OTHER THAN AN AUTHORIZED  
SERVICE REPRESENTATIVE WILL VOID THE WARRANTY.

FOR AUTHORIZED SERVICE, CALL 1-800-225-6595 OR VISIT [WWW.EDENPURESUPPORT.COM](http://WWW.EDENPURESUPPORT.COM)

---



WARNING  
RISK OF ELECTRICAL SHOCK DO NOT OPEN  
NO USER-SERVICEABLE PARTS INSIDE



## READ AND SAVE THESE INSTRUCTIONS BEFORE USING THIS FAN

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:


- DO NOT use this Fan to ventilate areas where flammable liquids or vapors are used, stored or are present, including paints, gasoline, varnishes, floor refinishing products or solvents.
- ALWAYS read and follow all warnings and instructions in this manual for the fan.
- ALWAYS be sure the plug fits tightly into the outlet. When plugs fit loosely into outlets, they may slip partially out of the outlet and create a poor connection. This may cause outlets to overheat and create a potential fire hazard. Outlets in this condition should be replaced by a qualified electrician.
- ALWAYS turn off the Fan and unplug the power cord when not in use, or when servicing, cleaning or moving the Fan.
- This product is intended for household use ONLY and not for commercial, industrial or outdoor use.
- AVOID the use of extension cords, power strips, power taps, outlet-style air fresheners or other cord-connected devices, as these devices may overheat and cause a fire hazard.
- DO NOT route power cord or adaptor under rugs, carpets, runners or furniture. This may damage the cord/adaptor or cause it to overheat, creating a fire hazard.

- ALWAYS place the Fan on a stable, flat, level surface while in operation to prevent the Fan from overturning.
- NEVER insert or allow fingers or objects to enter grill openings or injury and/ or damage to the Fan may occur.
- DO NOT block, cover or obstruct air flow to or from the Fan while in operation.
- DO NOT route power cord in or through areas such as doorways or where the cord may be damaged or create a tripping hazard.
- NEVER use a single extension cord to operate more than one Fan or other electrical device.
- DO NOT use this Fan in a window. Rain may create an electrical hazard.
- DO NOT use this Fan if it has been damaged or is not functioning properly.
- DO NOT operate any fan with a damaged cord or plug. Discard fan.
- Do not hang or mount Fan on ceiling.
- Do not operate if the Fan housing is removed or damaged.

### **Risk to Children and Other at Risk Groups of People**

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning safe use of the appliance and understand the hazards involved.
- Do not let children play with the appliance.
- Cleaning and user maintenance shall not be performed by children without supervision.

### **PARTS DESCRIPTION:**

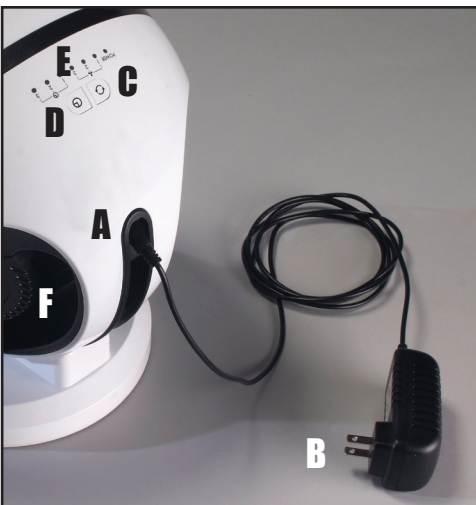

- A** DC/plug
- B** AC/plug
- C** Power & Fan Speed
- D** Timer
- E** LED Indicators
- F** Air Intake Cover
- G** Bladeless Air Outlet

# OPERATION

1. Unpack the Fan gently.
2. Remove the protective foam and plastic bag and save it for future use.
3. Place the Fan on a firm and level surface.
4. Connect the DC plug into the Fan.
5. Plug the AC plug of the power supply into the 110V wall socket.
6. The Fan will automatically blow in the level 1 setting.
7. Press the Fan Speed setting to adjust the fan speed from level 1 to level 4.
  - Level 1: fan LED 1 on
  - Level 2: fan LED 2 on
  - Level 3: fan LED 3 on
  - Level 4: fan LED 1, 2 and 3 all on
8. Adjust the Timer to turn the Fan off after 1-6 hours, or manually turn off.
  - Timer 1 LED ON: setting 1 hour
  - Timer 2 LED ON: setting 2 hours
  - Timer 3 LED ON: setting 3 hours
  - Timer 1&3 LED ON: setting 4 hours
  - Timer 2&3 LED ON: setting 5 hours
  - Timer 1&2&3 LED ON: setting 6 hours
9. Adjust the Fan to the desired angular air output direction.
10. Holding the Fan power button for three seconds will turn off the Fan. The fan will memorize the current Fan Speed setting. When it comes back on it will start in the recorded setting.

# CLEANING AND STORAGE

Turn the Fan off and unplug it before cleaning.

Use only a soft cloth or cotton swabs to gently wipe the Fan clean.

DO NOT immerse the Fan in water and never allow water to drip into the motor housing.

DO NOT use gasoline, paint thinner or other chemicals to clean the Fan.

For storage, clean the Fan carefully as instructed. Store the Fan in the original packaging or cover the Fan to protect it from dust.

---

## WARNING

ANY REQUIRED SERVICE OTHER THAN ROUTINE CLEANING SHOULD ONLY BE PERFORMED BY AN AUTHORIZED SERVICE REPRESENTATIVE

---